 


- 1 Power Button**
Turns the TV ON/OFF.
- 2 Microphone**
For voice search.
- 3 Input**
Changes your TV source.
- 4 Guide**
Takes you to the on-screen Guide.
- 5 Volume**
Controls the TV volume.
- 6 Ch**
Changes the channel up and down.
- 7 TiVo®**
Takes you to the main menu.
- 8 Mute**
Turns the sound on or off.
- 9 “i” Button**
Shows more information about what you’re watching.

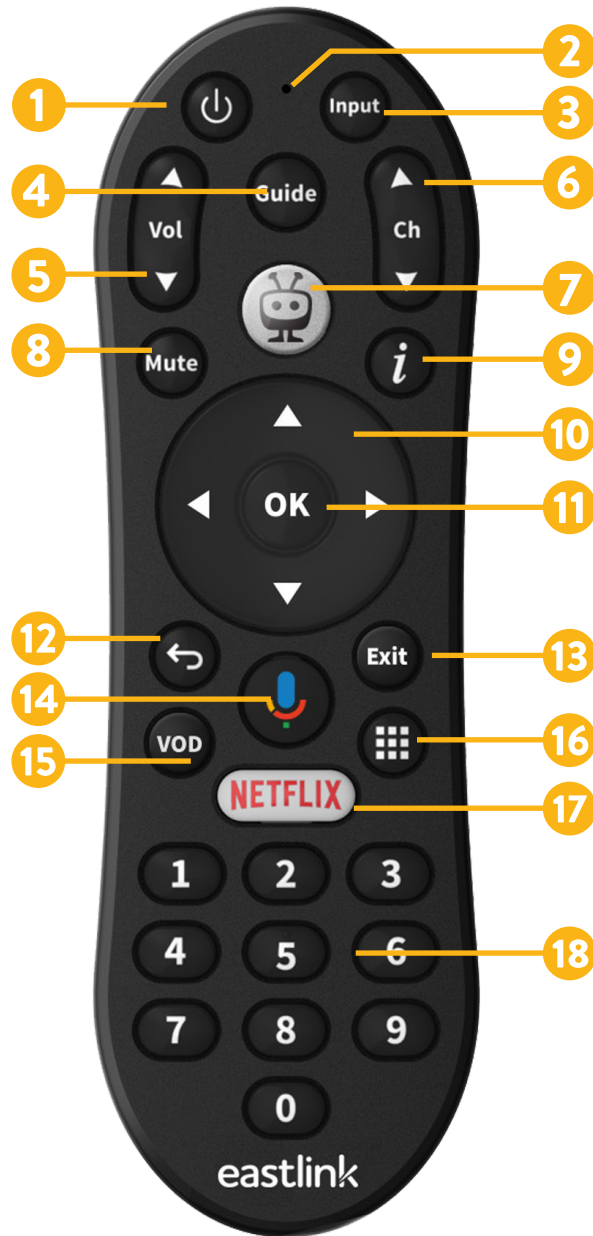

- 10** Navigate on screen using the **Up, Down, Left, and Right** arrows.
- 11 OK**
Accept the current selection.
- 12 Back**
Opens the main menu or returns to the previous screen.
- 13 Exit**
Returns to the previous screen viewed.
- 14 Voice Search**
Uses your voice to make commands or find what to watch.
- 15 VOD**
Opens the video OnDemand library.
- 16 Apps**
Takes you to all your apps.
- 17 Netflix**
Launches the Netflix app.
- 18** Use the **Number Buttons** to enter channel selections and PIN codes for parental controls.

- 1 Power Button**
Turns the TV ON/OFF.
- 2 Microphone**
For voice search.
- 3 Input**
Changes your TV source.
- 4 OK**
Accept the current selection.
- 5 Volume**
Controls the TV volume.
- 6 Guide**
Takes you to the on-screen Guide.
- 7 Mute**
Turns the sound on or off.
- 8 Back**
Opens the main menu or returns to the previous screen.
- 9 VOD**
Opens the video OnDemand library.


 
 


- 10 Netflix**
Launches the Netflix app.
- 11 TiVo®**
Takes you to the main menu.
- 12 Live TV**
Brings you back to Live TV.
- 13 “i” Button**
Shows more information about what you’re watching.
- 14 Exit**
Returns to the previous screen viewed.
- 15** Navigate on screen using the **Up**, **Down**, **Left**, and **Right** arrows.
- 16 Voice Search**
Uses your voice to make commands or find what to watch.
- 17** Use the **Number Buttons** to enter channel selections and PIN codes for parental controls.


How to record a show or movie?

1. Press **Guide** on your remote to open the Channel Guide. Using the Directional Controls or Channel UP/DOWN button, browse for the program in the channel you want to record.
2. When the program you want to record is found, use the Directional Controls to highlight the program. Press and hold the OK button.
3. You will need to select the available option you want, such as record or create OnePass.

Where do I find all of my recordings?

- Recorded shows/movies can be found in My Shows.
 - To access My Shows follow these steps:
1. Press the TiVo® Menu button  to display the TiVo® Menu Home Page.
 2. Using the Directional Controls, scroll right on the tabs.
 3. Highlight the tab My Shows, and press the OK button  to access the recordings.
 4. Using the Directional Controls, press the down/up button to highlight the show you want to watch.
 5. Once highlighted, press the OK button  and the show will begin.

How to add Closed Captions?

1. Press the TiVo® button  on the remote.
2. Select Menu from the TiVo® Menu Home Page. Press OK.
3. Select Settings, select Accessibility. Press OK.
4. Select from the available options (shown below):
 - Subtitles & Closed Captioning
 - Subtitles & Closed Captioning Language
 - Closed Captioning Preferences
 - Language and Audio Description

How do I turn my TV on/off with the TiVo® Stream remote?

- Press the Power button  on your TiVo® Stream remote.

How do I access the Channel Guide and navigate to the desired Channel?


1. Press the Guide button **Guide** on your remote.
2. Use the Directional Controls or the Channel UP/DOWN buttons to navigate the Channel Guide.
 - Directional controls: Navigates one channel at a time.
 - Channel UP/DOWN: Navigates multiple channels at once.
3. Searching for a specific channel, use the Channel Number buttons to directly enter the desired channel.
4. Press OK button once you find the show you want.

How do I select channels in the Channel Guide?


- Press the OK button  on the highlighted show within the Channel Guide.

I am stuck on an App or the Guide and cannot watch Live TV.

What do I do?

- The TiVo® Stream remote has a Exit button.  Pressing this button will bring you to the last channel you were watching.
- Example: You are watching the Weather Network and it loaded into the app. To exit the app and watch TV, press the Exit button.

How do I change my TV screen to show a picture?

- If you are seeing a black, blue, snowy screen, or a message displaying CBL or No Signal you will need to change the input on the TV.
- To change the input on the TV, press the Input button  on the TiVo® Stream remote until the correct input is displaying your TV show.